

ELKO EP, s.r.o. Palackého 493 769 01 Holešov, Všetuly Czech Republic Tel.: +420 573 514 211 e-mail: elko@elkoep.com www.elkoep.com




02-72/2016 Rev.: 2

Characteristics

• to control levels in wells, basins, reservoirs, tankers...

- in one device you can choose the following configurations: - single switch with single-state monitoring
- single switch with double-state monitoring
 one-stated monitors one level, two-stated monitors two levels (switches on one level and breaks on another)
- selection function of: pump up (filling) or pump down (emptying)
- adjustable time delay of output (0.5 10 s)
- adjustable hysteresis (5 100 kΩ)
- measuring frequency 10 Hz prevents polarization of liquid and raising oxidation of measuring probes
- galvanically separated supply voltage UNI 24 .. 240 V AC/DC
- output contakt 1x changeover 8 A / 250 V AC1
- 1-MODULE, DIN rail mounting

Description

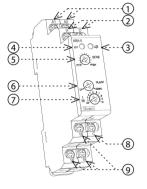

- 1. Supply voltage terminals
- 2. Terminals for conection of probes H, D
- Output indication
 Indication of supply voltage
- 4. Indication of supply voltage
- Adjustment of probe sensitivity
 Choice of function
- 7. Adjustment of delay on output
- 8. Terminal for connection of probe C
- 9. Output contact

Notice

The device provides basic isolation between the power terminals A1, A2 and measuring terminals D, H, C, which is rated according to over-voltage category II. Accordingly, the input measurement circuit is electrically isolated from the power supply terminals. In installations where there is a risk of contact with the conductive parts of the measuring circuit, it is necessary use an appropriate source of safe low voltage in accordance with current applicable regulations related to the installation. For any terminal, can be connect the PE wire.

Type of load	 cos φ ≥ 0.95 AC1	-M- AC2	-M- AC3	≠Œ〕≢ AC5a uncompensated	「 「」」 「」」 AC5a compensated	AC5b	AC6a	 Ас7ь	
Mat. contacts AgNi, contact 8A	250V / 8A	250V / 3A	250V / 2A	230V / 1.5A (345VA)	x	300W	х	250V/1A	250V/1A
Type of load	 AC13	 AC14	 		- <u>M</u> -	- <u>M</u> - DC5	 DC12	 DC13	 DC14
Mat. contacts AgNi, contact 8A	X	250V / 3A	250V / 3A	24V / 8A	24V/3A	24V / 2A	24V/8A	24V/2A	X

 
HRH-5


Symbol

Level switch


16 18

Connection



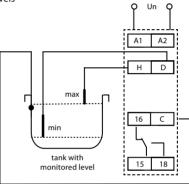

Monioring of one level

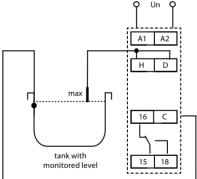


Technical parameters

	HRH-5					
Function:	2					
Supply terminals:	A1 - A2					
Supply voltage:	24 240 V AC / DC (AC 50 - 60 Hz)					
Consumption:	max. 2 VA					
Supply voltage tolerance:	-15 %; +10 %					
Measuring circuit						
Sensitivity (input - opening):	adjustable in range 5 k Ω - 100 k Ω					
Voltage on electrode:	max. AC 3.5 V					
Current in probes:	AC < 0.1 mA					
Time reaction:	max. 400 ms					
Max. cable capacity: *	800 nF (sensitivity 5 kΩ),					
	100 nF (sensitivity 100 kΩ)					
Time delay (t):	adjustable, 0.5 -10 sec					
Time del. after switching on (t1):	1.5 sec					
Accuracy						
Setting accuracy (mech.):	± 5 %					
Output						
Number of contacts:	1x changeover / SPDT (AgNi / Silver Alloy)					
Rated current:	8 A / AC1					
Switching capacity:	2000 VA / AC1, 240 W / DC					
Switching voltage:	250V AC1 / 24V DC					
Mechanical life (AC1):	1x10 ⁷					
Electrical life:	1x10 ⁵					
Other information						
Operating temperature:	-20 °C to +55 °C (-4 °F to 131 °F)					
Storage temperature:	-30 °C to +70 °C (-22 °F to 158 °F)					
Electrical strength:	2.5 kV (supply - sensors)					
Operating position:	any					
Mounting:	DIN rail EN 60715					
Protection degree:	IP40 from font panel / IP10 terminals					
Overvoltage cathegory:	И.					
Pollution degree:	2					
Max. cable size (mm ²):	max. 1x 4, max. 2x 2.5 / with sleeve max. 1x 2.5, 2x 1.5 (AWG 1					
Dimensions:	90 x 17.6 x 64 mm (3.5″ x 0.7″ x 2.5″)					
Weight:	72 g (2.5 oz.)					
Standards:	EN 60255-6, EN 61010-1					


* Max. line length is limited by the capacity between the individual cable cores.

Function

 Function PUMP UP



Function PUMP DOWN

 

Relay is designated for monitoring of levels of conductive liquids with possibility of functions: PUMP UP or PUMP DOWN. To prevent polarization and liquid electrolysis of liquid, and undesirable oxidation of measuring probes, alternating current is used. For measuring use three measuring probes: H- upper level, D- lower level, C - common probe. In case you use a tank made of a conductive material, you can use it as probe C. In case you require monitoring of one level only, it is neccessary to connect inputs H and D and connect them to one probe - in this case sensitivity is lowered by half (2.5... 50 kΩ). Probe C can be connected with a protective wire of supply system (PE). To prevent undesirable switching out output contacts by various influences (sediment on probes, humidity...) it is possible to set sensitivity of the device according to conductivity of monitored liguid (corresponding to "resistance" of liquid) range 5 up to 100 kΩ. To reduce infuences of undesirable switching of output contacts by liquid gorgle in tanks, it is possible to set delay of output reaction 0.5 - 10 s.

Level switches accessories

It is possible t use any probe (any conductive contact, it is recomended to use brass or steinless-steel material).

- <u>Manufacturer's recommended probes</u>: SHR-1-N - stainless steel sensor, SHR-1-M - brass sensor, SHR-2 - stainless steel mounted in PVC cover, SHR-3 - stainless probe intended to be used in harsh industrial environments, FP-1 - flood probe.

 - Factory recommended conductor (certified to be used in drinking water): three-wire cable D03VV-F 3x0.75/3.2, cable D05V-K 0.75/3.2.

Warning

Device is constructed for connection in 1-phase main alternating current and must be installed according to norms valid in the state of application. Installation, connection and setting can be done only by a person with an adequate electro-technical gualification which has read and understood this instruction manual and product functions. The device contains protections against over-voltage peaks and disturbing elements in the supply main. Too ensure correct function of these protection elements it is necessary to frontend other protective elements of higher degree (A, B, C) and screening of disturbances of switched devices (contactors, motors, inductive load etc.) as it is stated in a standard. Before you start with installation, make sure that the device is not energized and that the main switch is OFF. Do not install the device to the sources of excessive electromagnetic disturbances. By correct installation, ensure good air circulation so the maximal allowed operational temperature is not exceeded in case of permanent operation and higher ambient temperature. While installing the device use screwdriver width approx. 2 mm. Keep in mind that this device is fully electronic while installing. Correct function of the device is also depended on transportation, storing and handling. In case you notice any signs of damage, deformation, malfunction or missing piece, do not install this device and claim it at the seller. After operational life treat the product as electronic waste.